

DATASHEET

Structure 3U

1	Change log	3
	Overview	
	Highlighted features	
	Elements	
5	Mechanical drawing	6
6	EnduroSat's Solar Panel compatibility	10
7	Materials	11
8	Included in the Shipment	11
9	Handling and storage	11

STRUCTURE 3U

DATASHEET

This user manual details the applications, features and operation of EnduroSat's **Structure 3U** product. **Structure 3U** is an acronym for **Structure 3 Unit**

Please read carefully the manual before unpacking the elements to ensure safe and proper use.



Figure 1 – EnduroSat Structure 3U

1 CHANGE LOG

Date	Version	Note
10/07/2018	Rev 1	Initial Document
24/10/2018	Rev 1.1	Tolerances updated
16/11/2018	Rev 1.2	Technical writing enhancements

2 OVERVIEW

EnduroSat's **Structures** have a minimalistic design and are easy to assemble. They also provide a physically safe environment for the customer's payload and subsystems during all phases of the mission (e.g. launch phase). These qualities ensure stable operation of the CubeSat.

Our **Structure** products comply with the CubeSat standard and are compatible with a wide range of CubeSat subsystem producers. They also come with kill switches and 2 separation springs already integrated.

3 HIGHLIGHTED FEATURES


- Dimensions 3U: 100x100x340.5 mm
- Material: Aluminum 6061 or 6082
- Modular design
- One/two kill switches
- Two separation springs (optional)
- Mid-support bars
- Customizable design
- Custom nuts
- Weight 3U* < 285 g

*including bolts


4 ELEMENTS

EnduroSat's **Structure** products are designed to be modular and are made up of 3 types of elements (top, bottom, and legs). This design approach allows the top and bottom elements to be used for different form factors. For instance, a **1U Structure** can be converted to a **3U Structure** by changing only the side elements.


1 x Top Element (Z+)

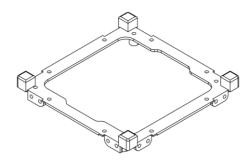


1 x Bottom Element (Z-)

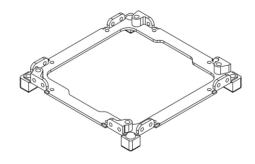

2 x Leg 3U Element

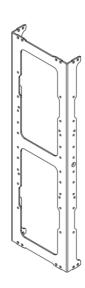

2 x Support Bars

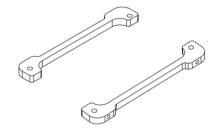

5 MECHANICAL DRAWING

The following drawings show main dimension of **Structure 3U**. All dimensions are in mm. A STEP file can be provided upon request.

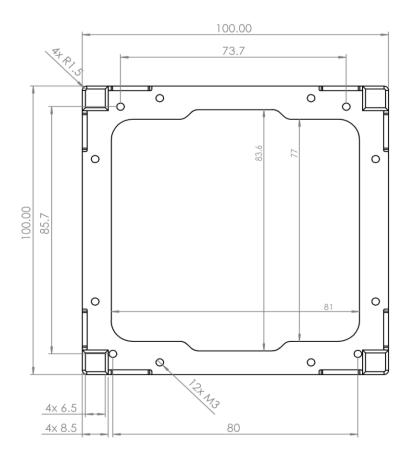


Figure 2: Structure 3U – Top View (Z+)

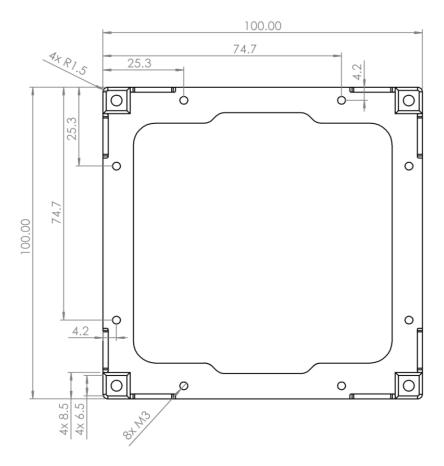


Figure 3: Structure 3U - Bottom View (Z-)

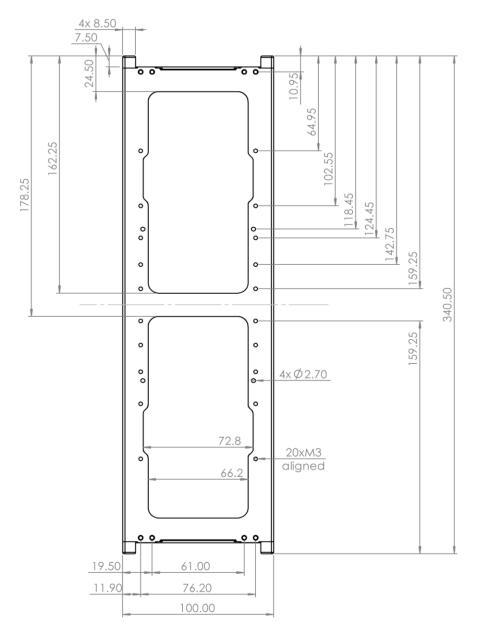


Figure 4: Structure 3U - Side 1 View


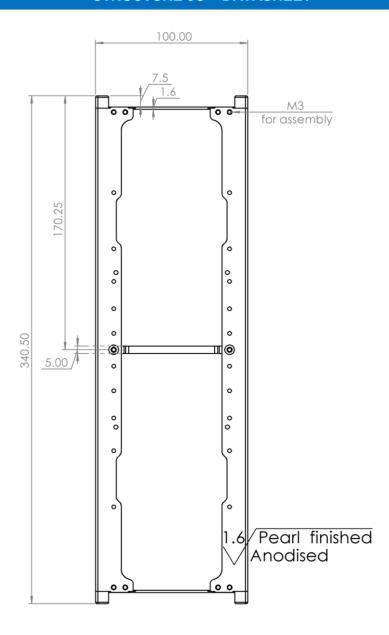


Figure 5: Structure 3U - Side 2 View

The dimensional tolerances for an assembled **Structure 3U** comply with the CubeSat Design Specification (± 0.1 mm in X/Y axis, and ± 0.3 in Z axis).

6 ENDUROSAT'S SOLAR PANEL COMPATIBILITY

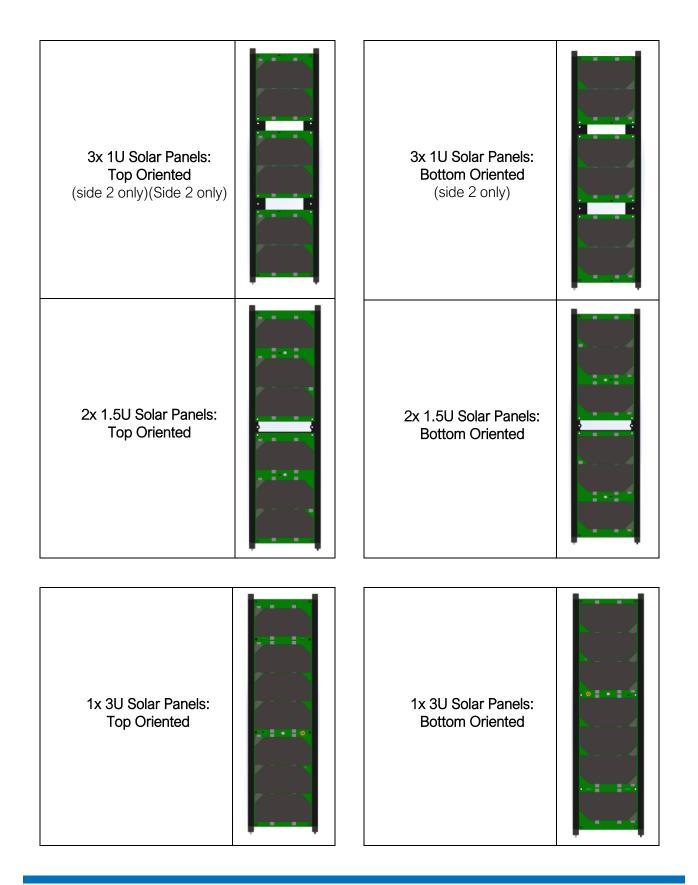

7 MATERIALS

All the elements of EnduroSat's **Structures** are made of Aluminum 6061-T651 or Aluminum 6082-T6, pearl finished and hard anodized (25-30 µm).

8 INCLUDED IN THE SHIPMENT

EnduroSat provides along with the **Structure**:

- Torx DIN965/ISO 7046-1 -A2- M3 Length: 4 mm
- Torx DIN965/ISO 7046-1 -A2- M3 Length: 5 mm
- Torx DIN965/ISO 7046-1 -A2- M3 Length: 8 mm

Recommended torque for mounting solar panels onto the structure is 0.8 Nm

9 HANDLING AND STORAGE

Particular attention shall be paid to the avoidance of damage to the elements of the **Structure** during handling, storage and preservation. The handling of the **Structure** should be performed in compliance with the following instructions:

- Handle using PVC, latex, cotton (lint free) or nylon gloves.
- The environment where structure module will be handled shall meet the requirements for a class environment 100,000, free of contaminants such as dust, oil, grease, fumes and smoke from any source.
- Store in such a manner as to preclude stress and prevent damage.
- To prevent deterioration, the **Structure** must be stored in a controlled environment (i.e. the temperature and humidity levels shall be maintained in the proper ranges):
 - o Ideal storage temperature range: 15°C to 27°C
 - o Ideal storage humidity range: 30% to 60% relative humidity (RH)